



BIOMASS BOILER
ATTACK® PELLET 30
AUTOMATIC PLUS



INSTRUCTIONS FOR USE



WWW.ATTACK.SK

CONTENTS

Important information:	3
Contents	2
Introduction:	3
General description	4
Purpose of usage	5
Boiler description	5
Boiler regulation	6
Technical parameters.....	6
Dimensions of boiler ATTACK PELLET 30 AUTOMATIC Plus	7
Main parts of boiler ATTACK PELLET 30 AUTOMATIC Plus.....	7
Assembly and installation of boiler.....	8
Boiler connection scheme.....	10
Burner connection scheme.....	11
Boiler protection against corrosion	12
Binding norms for boiler projecting and assembly:	12
Operation prescriptions.....	13
Maintenance of heating system with boiler	15
Recommended schemes of connection.....	16
Technical description of burner	16
Technical data of burner	17
Voltage and energy consumption of burner	17
Description of burner function.....	18
Usage of pellet burner.....	19
Menu buttons nad their function	19
Messages on display	20
Menu messages	21
Production settings	22
How to install pellet feeder and container	25
Burner start.....	25
Burner shut down.....	25
Emergency shut down.....	26
Cleaning and maintenance.....	26
Troubleshooting.....	27
Possible causes of faults.....	28
Accessories	29
Advanced menu	30
Instructions to disposal of product after expiration of its lifetime	34
Disposal of packaging	34
Accessories	34

IMPORTANT INFORMATION:

- Boiler for wood pellet combustion.
- Installation, test heat-up and training of attendance must be performed by trained service technician, who has to fill-in the protocol about boiler installation.
- Recommended boiler operation temperature is 80 – 90°C. Lower operation temperature may cause creation of condensate, shorter life-time of boiler and warranty expiration.
- The only fuel to use are pellets, adequate to the approved fuel specification.
- Appropriate boiler output represents very important condition of economic operation and correct boiler function. Nominal boiler output has to be adequate to thermal losses of the heated object.
- It is the responsibility of the installer to ensure compliance to all relevant building regulations.

Please, read this manual before starting-up the boiler.

- Keep this manual for attendance on a suitable place in the boiler room. It is recommended to keep it in a plastic pack and to hang it on a visible place on the wall to be reached by technician, when doing service in your boiler room.
- Boiler door and connections between boiler and chimney have to be airtight.
- *Overpressure in combustion chamber* should be at least 5 pascal (0,5 mm of water column, resp. 0,05 hPa).
- The PEL30AP appliance is intended for combustion of wood pellets and it cannot be used for combustion of other fuel types.
- The PEL30AP appliance for pellet combustion can be installed in a boiler room only, in conformity with prescriptions of the local fire safety / construction authority.

WARRANTY FOR BOILER IS NOT VALID IF:

- **it is not operated with prescribed fuel - pellets adequate to the approved fuel specification.**
- **there is no mixing device Regumat ATTACK-OVENTROP installed in the system to ensure temperature of the boiler return water over 65°C.**

WARNING SIGN



Warning sign is used in this manual to prevent potential hazards by breaking the instructions. Two types of warnings are used in this manual:



WARNING – warns about dangerous situations and situations that may cause health injury or damage by breaking the indispensable measures.



ATTENTION – warns about less dangerous procedures that may cause safety hazard or damage of property.

INTRODUCTION:

Dear customer,

thank you for your confidence, expressed by purchase of our product – the ATTACK PELLET 30 AUTOMATIC Plus boiler for pellet combustion. We wish it serves you well and for a long time. Proper attendance of the boiler is one of the conditions for reliable and correct operation. Therefore it is necessary to read this manual carefully. This manual is written with respect to the correct boiler function.

Main conditions of the correct boiler operation are:

- selection of the correct boiler type and output
- impeccable commission
- correct attendance
- periodical technical maintenance
- reliable service

GENERAL DESCRIPTION

The ATTACK PELLET 30 AUTOMATIC Plus boiler for pellet combustion is intended for economical and ecological heating of dwelling houses, cottages, small plants and similar objects. Wood pellets are prescribed fuel for this boiler.

Marking of the boiler:

ATTACK PELLET 30 AUTOMATIC Plus

PELLET	– Boiler for wood pellets combustion
30	– Output of boiler
AUTOMATIC	– Automatic cleaning of ashtray
Plus	– Automatic cleaning of exchanger by movable turbulators

PURPOSE OF USAGE

The ATTACK PELLET is a modern boiler for wood pellet combustion. By its technology it saves environment and offers comfort comparable with usage of gas boiler.

Boiler is intended for heating of family houses, shops, industrial objects and other similar buildings.

BOILER DESCRIPTION

The ATTACK PELLET 30 AUTOMATIC Plus boiler burns pellets with diameter of 6 – 8 mm and max. length of 35 mm.

Construction of boiler consists from combustion chamber with partition, heat exchanger and flue connection.

Boiler body cooled by water is a basic part of boiler. It is welded from boiler steel plates of 3–6 mm thickness to ensure long lifetime. Tubular exchanger is equipped with turbulators, ensuring better heat transfer into heating water. They also serve for exchanger cleaning to provide uniform efficiency.

Combustion takes place in the burner. Optimal conditions for burning and output regulation are ensured electronically, by controlling fuel and air supply, in dependence on the heating parameters required by user.

Construction of burner, combustion chamber and exchanger ensures optimal burning of all combustible contents.

Boiler is equipped with device for automatic ash removal from the bottom of combustion chamber into the external box. Ash removing is set by production for every 12 hours.


Boiler body is insulated with mineral wool. Boiler covering is treated by powder technology.

Boiler can be accessorized with device for fuel supply and with pellet hopper of 450 l. In case of fuel shortage or burner failure it is possible to use electrical coil up to the 6 kW output (and 450 mm length), installed into the flange with G 6/4" internal thread on the left side of boiler. This coil can be also used as an anti freeze protection. Coil is equipped with operating and emergency thermostat. Its electrical installation is independent from electrical installation of boiler.

BOILER REGULATION

The ATTACK PELLET 30 AUTOMATIC Plus boiler for pellet combustion is regulated by control panel placed on the upper covering.

- 1 – **Main boiler switch** – Plugs boiler into / off the power
- 2 – **Burner mode switch** – switches burner between stand-by and operating mode
- 3 – **Boiler thermostat** – setting of boiler operating temperature
- 4 – **Thermomanometer**
- 5 – **Reset button of the emergency thermostat** – under cover
- 6 – **Fuse 10 A / 250 V**

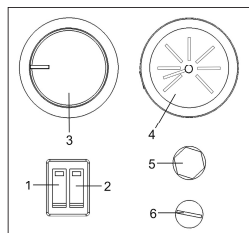

Operation, parameters and settings of burner are described in the appendix of this manual.

TECHNICAL PARAMETERS


Boiler type		PELLET 30 AUTOMATIC Plus
Boiler output	kW	30
Output range	kW	8 – 30
Heat exchange area	m ²	1,9
Prescribed chimney draught	Pa	15 – 20
Max. operating water overpressure	kPa	250
Pressure loss of water	Pa	152 ($\Delta T=10K$); 38 ($\Delta T=20K$)
Boiler weight	kg	355
Flue diameter	mm	150
Boiler height	mm	1220
Boiler width	mm	575
Boiler depth	mm	1 250
Protection of el. parts	IP	IP 40
Max.el.input (by ignition)	W	600
Operating el. input	W	90
Boiler efficiency	%	90,6
Boiler class by CO emission (under EN 303-5)		5
Flue temperature by nominal output	°C	143
Prescribed fuel		Wood pellets d=6 – 8 mm, l=35 mm max.
Average consumption	kg h ⁻¹	2,4 – 6,9
Volume of water in boiler	l	62
Range for setting of heat. water temperature	°C	60 – 90
Connection voltage	V/Hz	230/50

Prescribed temperature of boiler return water within operation is 65°C.


Recommended operating temperature of water in boiler is 80 – 90°C.

The ATTACK, s.r.o. manufacturer reserves right for change of technical parameters and boiler dimensions without previous announcement.

DIMENSIONS OF BOILER ATTACK PELLET 30 AUTOMATIC PLUS

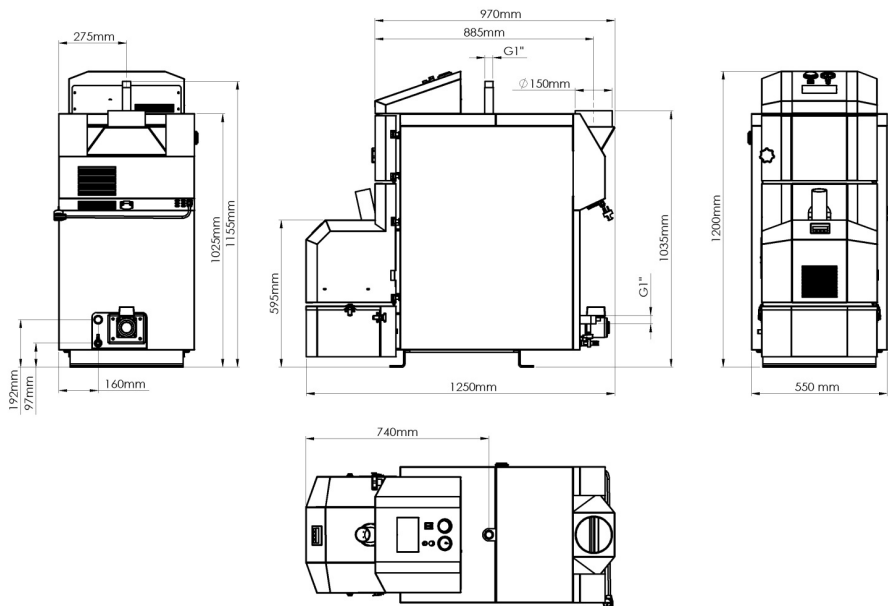

MAIN PARTS OF BOILER ATTACK PELLET 30 AUTOMATIC PLUS

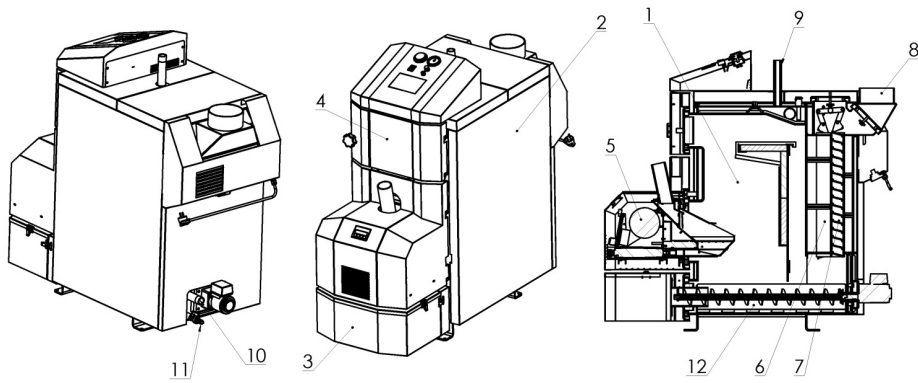

ASSEMBLY AND INSTALLATION OF BOILER

Installation of boiler

Only the person with valid approval for installation and assembly of the heat technology devices can install the boiler. For installation it is necessary to elaborate a project in conformity with the valid prescriptions. Technician must check, if information on data plate comply with project and accompanying documentation, before doing the installation. Boiler must be connected in conformity with valid prescriptions, norms, regulations and this manual. Manufacturer takes no responsibility for damages caused by incorrect connection, eventually by incorrect operation.

Placing of boiler

Boiler is intended for installation and operation in premises with elementary environment (AA5/AB5) under the STN 33 2000-3. By boiler installation it is necessary to keep safety distance of its surface from flammable materials in dependence on the grade of flammability:

- | | |
|---|--------|
| • from materials of flammability B, C1, C2 | 200 mm |
| • from materials of flammability C3 | 400 mm |
| • from materials, which grade of flammability has not been approved under the STN 73 0853 | 400 mm |

Examples of division of constructive materials by the grade of flammability:

- grade of flammability A – inflammable (brick, block, ceramic tiles, mortar, plaster)
- grade of flammability B – very difficult to ignite (heraclith, lignos, boards from bazart felt)
- grade of flammability C1 – hard flammable (beech, oak, plywood, wersalit, hardened paper)
- grade of flammability C2 – medium flammable (pine, spruce chipboard, solodur)
- grade of flammability C3 – lightly flammable (boards from wood fibres, polyurethane, PVC, foam rubber, polystyrene)

If boiler stands on the floor from flammable materials, it must be protected by inflammable heat insulating pad, excessing boiler edge for 150 mm at least.

It is possible to use materials of the flammable grade A as inflammable and heat insulating materials. Any items from flammable materials cannot be placed on the boiler and in distance shorter than 500 mm.

When placing boiler in the boiler room, there should be free space left of at least 1 m beyond and 0,5 m from the sides and rear part of boiler. Above the boiler, there should be free space of at least 1 m. This space is necessary for ordinary operation, maintenance and eventual boiler servicing.



ATTENTION: It is inadmissible to place the ATTACK PELLET 30 AUTOMATIC Plus boiler in dwelling premises (including corridors)!

Air inlet

For correct boiler operation, it is necessary to ensure sufficient air supply for combustion. Minimum area of the air inlet is 200 cm².

Boiler connection into heating system

Installation and service of the ATTACK PELLET 30 AUTOMATIC Plus boiler can be performed by trained service technician only. Before boiler installation into the older heating system, it is necessary to flush the whole system to clean it. Heating system must be filled with water fulfilling requirements of the STN 07 7401:1991 and its callosity cannot exceed 1 mmol/l and concentration Ca₂₊ 0,3 mmol/l. By unkeeping these conditions, warranty for boiler expires!

Selection and way of connection of regulation and control elements

Boiler is delivered with basic regulation and control equipment. Connection of these elements is given on connection scheme. It is recommended to extended boiler regulation for next regulation elements for more comfortable and economical operation. Every pump in the system must be controlled by individual thermostat to prevent boiler undercooling at the return water inlet (return connection) under 65°C.

Connection of these elements is proposed by projectant, following specifical conditions of heating system. Electrical installation in combination with sufficient boiler equipment must be done by specialist under the valid norms.

Connection to electricity mains

Boiler is connected to el. mains 230 V / 50 Hz by plug with fork. Plug of M type has to be replaced by service technician with the same type of plug. Appliance must be placed in the way enabling attendance to reach the connection fork (under the STN EN 60335-1+A11:1997). Connection of el. socket must be in conformity with the STN 33 2000-4-46 norm. Socket must be equipped with middle protection stick, connected to the PE conductor. It is not permitted to use different cable distributors and extensions. Due to safety, power inlet must be freely accessible, when being connected to the el. mains.

Flue connection

Flue connection must empty into chimney vent. If it is not possible to connect boiler to chimney vent directly, appropriate extension of flue should be as short as possible (not longer than 1 m), without additional heating area and it has to ascend in direction towards chimney. Extensions of flue connection must be mechanically firmly joined, tight against flue leakage and easily cleanable. Extensions of flue connection cannot lead through foreign dwelling or utility units. It is necessary to eliminate usage of elbows and horizontal parts.

Chimney


Connection of appliance to chimney vent must always be done with agreement of the appropriate chimney authority. Chimney vent must create sufficient draught and reliably exhaust flue into atmosphere under all practically possible conditions. Correct size of the chimney vent ensures correct boiler function. Chimney draught directly depends on its diameter, height and roughness of its internal wall. Chimney vent must be sufficiently insulated to prevent creation of condensate. Temperature of the area of 1 m under the chimney collar cannot be lower than 60°C. Any other appliance cannot be connected to the chimney joined with the boiler. Diameter of chimney cannot be smaller than boiler outlet. Chimney draught must achieve prescribed values. However, it cannot be too high, not to decrease boiler efficiency and not affect the combustion (not to disturb the flame). In case of too strong draught it is necessary to install throttling flap between boiler and chimney.

Information values of chimney diameter

20 x 20 cm	min. height	7 m
Ø 20 cm	min. height	8 m
15 x 15 cm	min. height	11 m
Ø 16 cm	min. height	12 m

Exact chimney dimension is determined by the STN 73 42 10. Prescribed chimney draught is given in the Technical parameters.

BURNER CONNECTION SCHEME

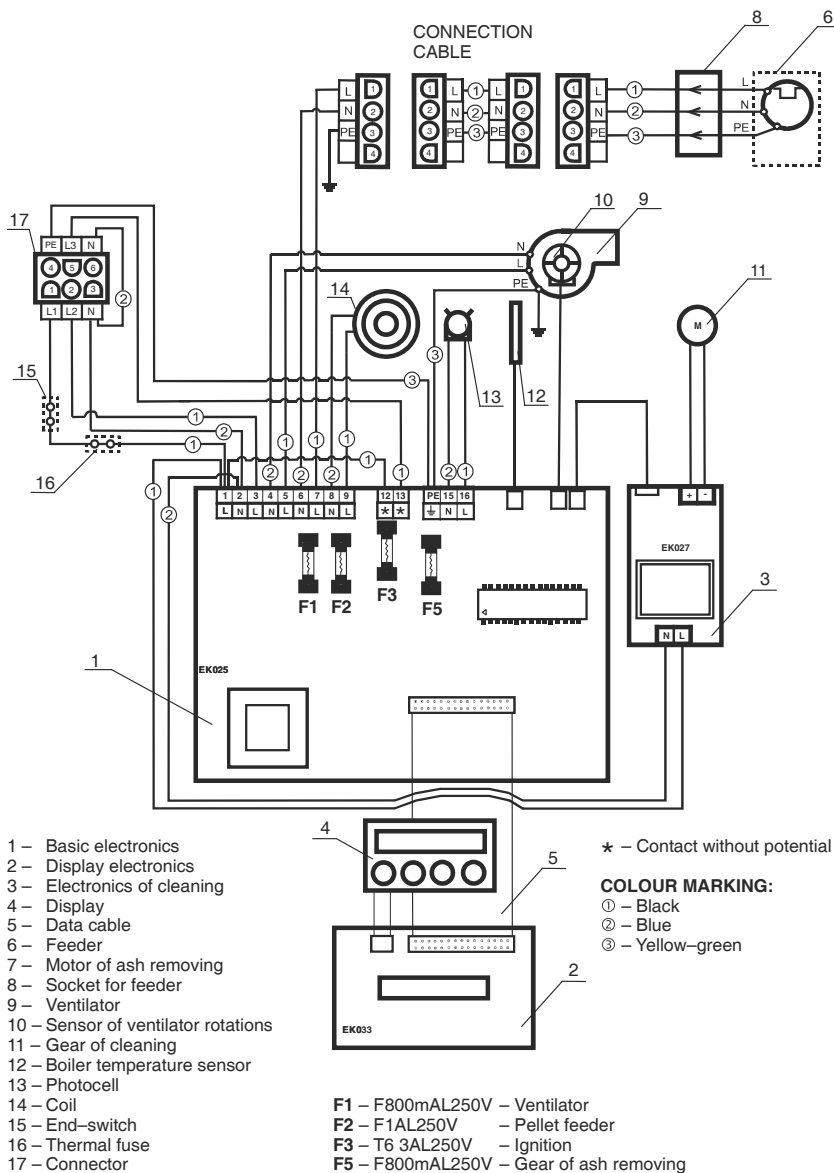

BOILER PROTECTION AGAINST CORROSION


Suitable solution of this problem is usage of the mixing device Regumat Attack-Oventrop). This solution enables creation of separate boiler and heating circuit and prevention against boiler undercooling under 65°C. Thereby it comes to decrease of water steams condensation and acid and tar creation in boiler exchanger and combustion chamber.

Usage of device is a condition of the valid warranty.

Regumat serves to keep temperature of the return heating water flowing into the boiler over 65°C, when thermostatic head is set to the 5 – 6th grade. Temperature of 60°C in the return connection causes increased creation of condensate and tar and consequently, shorter lifetime of boiler.

Technical parameters:

Clearance	DN25
Max.pressure	10 bar
Max.temperature	120°C
Value kvs	3,9

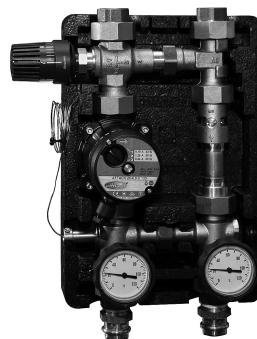

The Regumat consists of three way mixing valve, circuit pump, closing valve, thermometers and isolation. This solution is advantageous due to its compactness, easy attendance and guaranted protection of the boilers heat exchanger.

Regumat for boiler ATTACK PELLET: ordering code - DPP25003

BINDING NORMS FOR BOILER PROJECTING AND ASSEMBLY:

STN EN 303-5	Heating boilers for solid fuels
STN 734210	Design of chimneys and flue exhausts
STN 920300	Fire safety of local appliances and heat sources
STN EN 60335-1+A11	safety of el. appliances for household
STN 061000	Local appliances for solid, liquid and gaseous fuels
STN 060310	Central heating projecting and assembly
STN 060830	Safety device for central heating and DHW
STN 077401	Water and steam for heat energy devices with operation pressure of steam up to 8 MPa
STN 33 2000 4-46	Electrical installations of buildings. Part 4: Ensuring safety.
STN 33 2000-3	Electrical installations of buildings. Part 3: Determination of basic characteristics
STN 061008	Safety of heat devices
STN EN ISO 11202	Acustics
STN EN ISO 3746	Acustics
STN EN 62233	Measuring methods of electromagnetic arrays of appliances for household and similar devices by the exposition of persons
STN ISO 80000	Measurements and units

OPERATION PRESCRIPTIONS

Boiler preparation for operation

Before starting the boiler, make sure, that the system is filled with water, deareated and there is no pressure decrease of the heating water. Check tightness and construction of flue exhaust. To ensure quality function, the boiler must be attended in conformity with instructions given in this manual. Only adult person can operate the boiler.

Boiler start-up

Boiler is switched to the stand-by mode by the main switch (left button of double-switch), placed on the boiler control panel. This is signalized by red control light in the main switch. Boiler is started by switching the burner mode switch on (right button of double switch). This is signalized by control light in the switch. Knob of boiler thermostat has to be set to the required temperature of heating water. By clockwise turning the thermostat is the required temperature increased and vice versa. Fuel in the burner is ignited automatically by el. coil built inside. Boiler operation is automatic and it is controlled by boiler thermostat and other regulation elements, that can be connected into boiler terminal (e.g. room thermostat, programmable regulator, ...). Details about setting the burner parameters are described in the next chapters of this manual.



ATTENTION! Condensation and condensate leakage may occur by first heat-up. After longer heating, condensation is eliminated.

If the boiler was out of order for longer period (turned off or faulty), it is necessary to be more careful when starting it again. After longer idle period it may come to pump blockage or water leakage from system.

Regular and proper cleaning is important to ensure sustainable output and boiler life-time. Poor cleaning may cause boiler damage. All boiler door have to be tightly closed during the operation.

Fuel

By burners for wood pellets combustion:

APPROVED FUEL SPECIFICATION

Moulded wood pellets

Measured weight: 600 – 750 kg/m³

Heat value: 4,7 – 5,0 kWh/kg

Size/diameter: 6 – 8 mm

Size/length: Attention! max. 35 mm

Moisture max.: 12 %

Ash content: 0,5 – 1 %

Dust content: max. 3 %

Ash smoulder temperature: min. 1 100°C

Fuel must be in conformity with requirements of the norm DIN 51 731.

Methods of boiler regulation

Boiler regulation without room thermostat

For this case there is interconnection installed on contacts of boiler electrical terminal (TP-U1/ U2). Boiler is regulated according to the boiler temperature set on the boiler thermostat placed on the boiler control panel.

Boiler regulation with room thermostat

Boiler is controlled by the room thermostat, connected to the terminal contacts (TP -L1/L2) instead of interconnection, that has to be removed. The required boiler temperature will be considered as well. Also other type of requirement can be installed instead of the room thermostat – e.g. programmable regulator of heating.



ATTENTION! There is dangerous contact voltage of 230 V on the connection contacts of the room thermostat! Boiler must be disconnected from electricity by any action into the electrical terminal or boiler electrical installation!

Boiler protection

Boiler is equipped with emergency thermostat. If the boiler temperature exceeds 110°C, boiler safely gets out of order. When the boiler temperature decreases, it is possible to start the boiler again by using the reset button placed on the front control panel.

Fuel refill


Fuel is refilled in the container that belongs to the optional boiler accessories. Fuel should be refilled before the pellets in the container are totally consumed.



ATTENTION! Fuel container can be open only when fuel is being refilled, eventually by cleaning. Container has to be closed during the boiler operation.

Ash removing

The ATTACK PELLET 30 AUTOMATIC Plus boiler is equipped with device for automatic ash removing into the detachable box. It is necessary to check the box 2x per season and to empty it, if necessary. Stop the boiler for a short time, when removing the ash container.

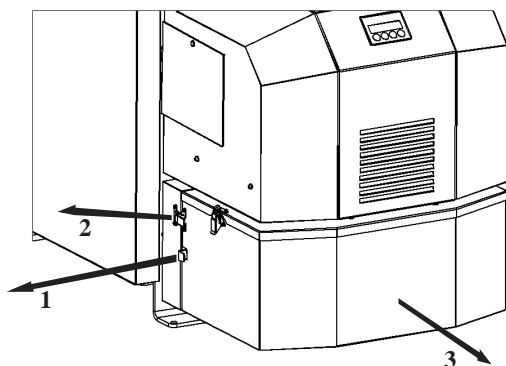

When emptying the box (see the picture):

1. Close inlet opening into the container by pulling the lever on the container rear side fully to the left
2. Release lever catches on container sides
3. Detach container from inlet tube of door cover by pulling it to yourself
4. Remove the ash

Do the reverse procedure to fit the container back.

When cleaning bottom of the combustion chamber, stop the boiler for a short time. Empty the iron ashtray, eventually – sweep the boiler bottom. Ash tray is placed in the bottom part of boiler, behind the ash tray door. Use gloves by manipulation with ash tray to prevent burning your hands. When the ash is removed, it is necessary to put the ash tray back and to close the ash tray door tightly.



WARNING – Do not operate the boiler without the ash container fixed with the closed upper cover (possible flue leakage) – life safety hazard!

Short-time boiler stop

If you wish to stop the boiler for a short time, turn the burner switch off and let the fuel burn down in the burner. Do not turn off the main switch.

Long-time boiler stop

When stopping the boiler for a long time, firstly – turn the burner switch off and let the fuel in the burner burn down. After the boiler is cooled down to 30°C, turn the main switch off and disconnect the plug from power socket.

MAINTENANCE OF HEATING SYSTEM WITH BOILER

At least 1x in 14 days it is necessary to check, eventually to refill water in the heating system. If the boiler is out of order during the winter, there is danger of water freezing in the system. Thereby it is reasonable to drain the water out. In other cases, drain the water out only, when it is absolutely necessary and for as short period as possible. After the heating season it is necessary to clean the boiler properly (after long idle period, the ash has to be swept out from the container / ash tray, walls and bottom of combustion chamber have to be cleaned as well) and replace the damaged parts.

Exchange of the door sealing cord

Remove the old sealing cord by screw driver and clean the groove, where the cord is placed. Take new cord and put its leading end between the horizontal parts of the groove. Use hand, eventually hammer to fit the cord into the groove along the door edge.

Fitting the hinges


After a particular period, it may come to abrasion of the sealing cord. To endure tightness of door, it is necessary to change their position by screwing the hinges. Inspection door is fixed to the boiler body by a long pin. Pull the pin out and screw the hinge by turning to change its position. Fit the door and put the pin back into the hinge.



WARNING! To pull the pin of the upper door out, it is necessary to demount the upper boiler covering. To protect the health, the boiler has to be turned off and the plug has to be disconnected from electrical socket.

RECOMMENDED SCHEMES OF CONNECTION

Scheme of connection with the REGUMAT ATTACK-OVENTROP regulation system

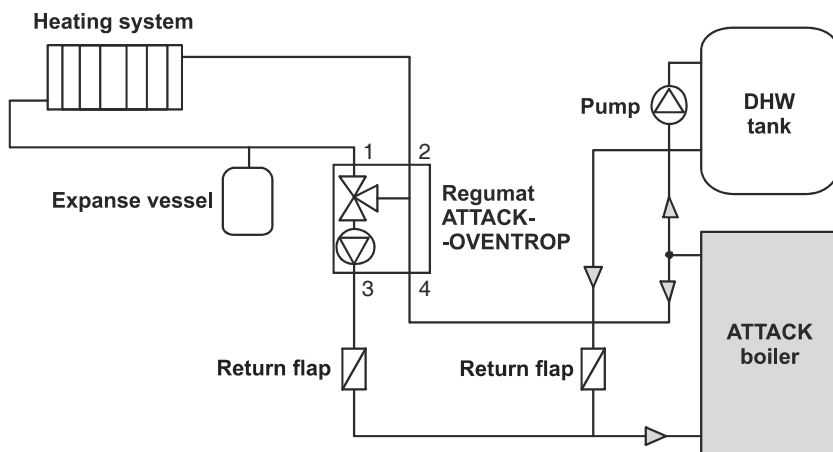

TECHNICAL DESCRIPTION OF BURNER

Burner operation is based on principle of *pellets falling* from pellet feeder through *inlet hose* and *inlet pipe* on the grate to be burned.

Burner is equipped with *electric ignition device*, that automatically lights pellets fallen on the grate. Ignition begins, when thermostat gives instruction to burner. Burner has own built-in thermostat (if there is no boiler / external thermostat, eventually combined device with room thermostat). Its temperature sensor must be in suitable casing in the boiler's water coat. *Switch-on* and *switch-off temperature* can be adjusted via the burner menu buttons. Actual operation data are visible on display.



ATTENTION! Head of boiler temperature sensor must not be treated with any contact liquid, nor paste.

Burner output is set from production for the range of 14 – 30 kW and it is divided into 3 levels: 1. (14 kW), 2. (22 kW) and 3. (30 kW).

Selected output level is written on display during the operation. Output level can be selected by burner menu buttons and displayed information. Output range can be changed in advanced menu in two levels: 8 – 12 kW and 14 – 30 kW.

Burner is equipped with automatic grate cleaning mechanism. When thermostat achieves required temperature, the burn-down cycle is started, the grate goes out to be cleaned by scraping. Thereby, the longer usage period is ensured, with no need to dismantle burner from boiler body. Burner uses control system to regulate gear of ash removing auger and gear of exchanger cleaning by turbulators.

Boiler convection parts should be cleaned periodically to keep high efficiency of heating.

Burner is intended for combustion of wood pellets with diameter of 6 – 8 mm.

Burner is manufactured following the industrial norms and prescriptions and it was tested and approved in conformity with directives about low voltage devices and with directives about electromagnetic disturbance.

TECHNICAL DATA OF BURNER

Model	PELH30Plus
Fuel	Wood pellets, 6 – 8 mm
Mode	8 – 12 kW; 14 – 30 kW
Output range	8 – 30 kW, by 2 kW
For boilers with heating chambers up to	3 m ²
Weight	28,5 kg

Main voltage	Main current	Hz
~230 V	10 A fuse	50



WARNING! Electrical installation must be done by certified electrotechnician. Main cables can be exchanged by approved electrotechnician only.

VOLTAGE AND ENERGY CONSUMPTION OF BURNER

Component	Mains/Volt	Min./Max. voltage	Fuse
Display	5 V DC	1 W	-----
Ventilator	230 V~	15 – 58 W	800 mA
Circuit board	230 V~		-----
Grate cleaning	24 V DC	10 – 50 W	switched
Ignition	230 V~	600 W	6.3 A
External pellet feeder	230 V~	15 – 220 W	1 A
Ash removing	230 V~	15 – 220 W	1 A

DESCRIPTION OF BURNER FUNCTION



ATTENTION! Burner works with boiler thermostat only, eventually extended with room thermostat. In both cases it has to be connected through protection against boiler overheating.

Normal start-up

- When thermostat gives instruction to burner, ventilator is started and photocell controls flame. If there is no flame, then comes the instruction for test blow-through of burner. Afterwards, pellets start falling into burner within the period stated by control system and ignition is activated. When the phase of fuel supply for ignition ends, control system awaits flame signal from photocell.
- When photocell recognizes flame, small amounts of pellets are falling within the *transition period*. Duration of this period depends on the output level set on burner. Pellet supply is being continually increased, unless it is adequate to the required output.
- This amount is further supplied into burner, until the operation thermostat gives instruction to stop.
- This signal stops pellet supply, while ventilator continues with air supply into burner.
- When photocell recognizes fuel burn-down, the burner blow-through begins.
- According to the adjusted delay, after fuel burn-down, burner cleaning begins – burner grate moves out against scraper and ash with unburnt pieces fall through front side of burner bottom into ash tray.
- After the grate moves back, the burner awaits new signal from thermostat.



ATTENTION! Grate drive unit is very strong and it may cause danger. Never put any body parts or other foreign objects into burner, when it is operating.

Normal start, when there is still flame in burner

If photocell recognizes flame during the start-up phase (e.g. after short-time power failure), control system immediately begins transition period. Pellet burner continues in operation as by normal start. (see above)

Normal start, when no flame is recognized by control system

Normal start-up process runs even in case, if there is no flame signal received by control system. Shortly after, system begins the new start-up trial again, when fuel supply for ignition is reduced to 45 % and it can be reduced during the whole ignition period. These parameters can be changed in service menu – by trained person only. If the second trial fails, all functions are turned off and alarm is activated. This alarm is indicated on display.



ATTENTION! Make sure, that sufficient flue gas temperature had been achieved. It has to be at least 60 °C – one meter under the chimney top. Lower temperature should be consulted with chimneyer. Flue gas temperature lower than 60°C during the combustion process increases risk of chimney damage by condensation.

USAGE OF PELLET BURNER

Pellet burner needs air for combustion. Thereby, boiler room must have opening for air inlet of at least 200 cm². Pellet burner must not be started before it is verified, that smoke can freely flow through boiler and chimney into atmosphere.

Pellet are supplied into burner from external feeder, connected to pellet container. Feeder has to be installed under the 45° angle to ensure the best function and uniform fuel supply. Feeder should be able to supply approximately 10 kg of pellets per hour of continual operation / requirement for pellet supply.

Pellets must be stored in well ventilated room without moisture, or in specially designed container.



ATTENTION! Burner consists from components of high quality, that must not be replaced with less quality spare parts. If components are replaced by other than original spare parts, warranty expires.

MENU BUTTONS NAD THEIR FUNCTION

Burner functions are set by menu buttons under display. (see also options of settings under the **Production settings** – below).

How to change settings of pellet burner:

„S“ – Menu / Enter: activation of miscellaneous records and access / save of changes

„-“ – Backspace from menu and decrease of adjustable values

„+“ – Step forward in menu and increase of adjustable values

„ESC“ – Exit/Escape: Exit from menu without saving new values.



Values adjustable by user are given in the following table:

MENU	Explanation
OUTPUT SETTING	Required output level (1, 2 or 3)
PELLETS DOSING	Setting of pellet supply
RECORD	Error recording for control purposes
BURN-DOWN	Instruction for burner burn-down
ADVANCED MENU	Access into service menu through code

MESSAGES ON DISPLAY

Stand-by mode

PAUSE	
OFF	FC: 0 %

Nothing operates in the burner, burner awaits start signal from thermostat.
Thermostat turns on.

Step 1 Test blowing

TEST-BLOWING	
ON	FC: ? %

Ventilator starts to work, and when photocell measures value lower than 5%, program continues.

Step 2 Heat-up fuel feed

IGNITION 1	
ON	FC: ? %

Heat-up fuel feed is supplied into burner and program awaits „flame“ signal from photocell.

Step 3 Transition phase

TRANS.PHASE	??KW
ON	FC: ? %

In photocell and control system detect flame. Small, continually increasing amounts of pellets are fed into burner, unless the necessary pellet dosis is achieved.

Step 4 Combustion

COMBUST	??KW
ON	FC: ? %

Combustion phase runs, until it is aborted by thermostat.

Step 5 Burn-down

FINAL-COMBUST	
OFF	FC: ? %

Thermostat aborted combustion phase and burner begins the burn-down phase.

Step 6 Cleaning

SCRAPING	
OFF	FC: 0 %

Grate moves out. When it is completely shifted out, ventilator works at full output, until it moves back.

Step 7 Ash removing

STOKERTIME	
OFF	FC: 0 %

Gear of ash removing is started after determined period (e.g. 6 hours) and it works within the stated time (e.g. within 3 min).

Step 8: Return into standby mode.

PAUSE	
OFF	FC: 0 %

MENU MESSAGES

PAUSE	
OFF	FC: 0 %

Burner in standby mode.

Hold "S" button

EFFECT LEVEL	
ENTER	EXIT

Here you can change burner output.
Level 1 = 8 – 12 kW, Level 2 = 14 – 30 kW.
adjustable in advanced menu.

Press "+" button.

PELLET-TRIM	
ENTER	EXIT

Here you can set supplied amount of pellets. It is not necessary, if correct weight of pellets had been set in the Pellet trim in service menu.

Press "+" button.

MAKE FINAL COMB.	
ENTER	EXIT

operation from other reasons, press the „M“ button and the burn-down mode begins. To restart burner after ash removing, press „M“.

Press "+" button.

LOG	
ENTER	EXIT

troubleshooting“.

This internal recording can be helpful by troubleshooting, when burner stops and alarm is activated. Last 10 different error codes are recorded. For more information about error codes, see „Troubleshooting“.

Press "+" button.

MENU/ADVANCED	
ENTER	EXIT

To enter into advanced menu you need password (code). It is necessary to be familiar with program functions of burner.

PRODUCTION SETTINGS

Before being delivered, burner should be set in the following way:

Generally accessible menu:

Menu	Production settings	Selection	Adjustable
Output level	1 = 8 kW 2 = 10 kW 3 = 12 kW	1, 2, 3	8 – 12 kW
Pellet dosing	95 %	50–200 %	50 – 200 %
Burn-down	90 sec.		10 – 600 sec.
Record	10 – 26	Not adjustable	Not adjustable
Advanced menu	Random number	+ 5	Not adjustable

“Record” means, that control system saves last 10 error codes. See also „Troubleshooting“.

Advanced menu:

Advanced menu	Production settings	Min. – max.	Unit
Output adjustment	1 = 14 2 = 22 3 = 30	8 – 12 14 – 30	kW
Ignition	90 %	50 – 300	%
Delay	1	1 - 3	min
Feeding time 1	95	30 - 500	%
Ignition time 1	480	10 - 600	sec.
Feeding time 2	45	30 - 300	%
Ignition time 2	240	10 - 600	sec.
Rotation speed of fan at ignition	1500	800 - 2800	rpm
Time of testing blowing	15	0 – 60	s.
Transition phase	240 – 460	60 – 600	s.
Transition feed of pellets	15	10 – 100	%
Time of cleaning by blowing	200	10 – 900	sec.
Ash removal			
Ash removing time	3	0 – 10	Min.
Time Interval	6	1 – 200	hour
Max. combustion time	60	0 – 1080	Min.
Anti-cycling	10	0 – 60	Min.
Output modulation	75	0 – 100	%
ΔT	10	1 – 100	K
Photosensor (sensitivity)	35	25 – 80	%
Selected thermostat	Combined	External/internal/comb. with room thermostat	
Scrapper cleaning	active	0, 1	
Number of cleaning	1	1 - 5	
Start if thermostat	Turn off	Turn off/on	

Delay of cleaning	1	0 - 60	min
Pump control	Automatically	Inactive/automatic	
Pump delay	10	0 - 60	min
Pump safety temperature	85	70 - 90	°C
Language *)	Slovak		
Output range	1	0 (8 – 12 kW), 1 (14 – 30 kW)	
Set. of pellet feeder:			
Energy	46	45 – 50	10 × kWh/kg
Heat.amount	1100	0 – 2000	g/6 min.
Fan speed adjustment	95	10 – 500	%
Fan 1 gain	10	1 - 100	
Fan 1 interval	1	1 - 50	
Stokertime			hour
Menu/Test		Auto/Manual	
Menu/Setting	Saves error codes	See Advanced	
Menu / Errors		See Advanced	

 
*) Languages: Slovak, Czech, English, German, Italian, French, Spanish, Russian, Hungarian, Greek.

How to change production settings

To change settings, select the required menu /parameters. Change actual values by pressing „+“ . O:...indicates actual value, N:...can be adjusted to new value. Values can be increased by „+“ button and decreased by „-“. Change is confirmed and saved by „S“ button. Not to save changes, press „ESC“ (Exit/Escape).

Please, do not make any changes before reading this manual!

Example:



Reset of production settings

To reset production settings, select advanced menu and enter password (code = figure by „O“ + 5). Then, select Menu / setting and press „S“. Go to „return to production“ and press „S“ again. Thereby, the production settings are reset.

In the following way you can also save your own settings: by pressing „+“ you get to „Save settings?“. Save your settings by pressing „S“. Exit from menu by the „ESC“.

Regulation of pellet dosing


Before starting the burner, it is necessary to adjust pellet feeding through parameter „Pellet trim“ in Advanced menu. Thermostat must not turn the heating on, while setting.

Firstly, set the „Heat value“ parameter to value given by your pellet producer (e.g. by 4,8 kWh/kg – set parameter to 48, etc.).

Now, fasten plastic bag around opening of pellet feeder. Confirm by „S“ and keep the instructions. Weigh pellets fallen into the plastic bag, enter weight in grams by „+/-“ buttons and

press „S“ to save value. This setting has to be done within 15 minutes. Otherwise, burner switches to standby mode. Weigh the pellets very precisely!
After setting of the above mentioned parameters, all other parameters related with pellet supply are automatically adjusted by control system.

HOW TO INSTALL PELLET FEEDER AND CONTAINER

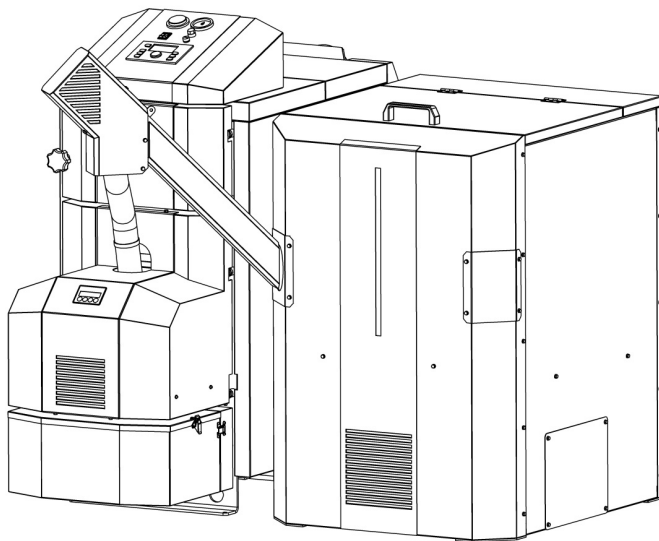

Install pellet container and pellet feeder. There should be min. height difference of 400 mm between opening of feeder and burner inlet pipe. In horizontal direction, opening of feeder and inlet pipe should be in min. distance of 150 mm (i.e. not vertically aligned).

Fill container with pellets and connect feeder into power socket (230 V~). Let feeder run, unless it achieves continual pellet supply. It is recommended to fasten plastic bag to the opening of feeder to catch the falling pellets. Disconnect feeder from socket. Install inlet hose between feeder opening and inlet pipe and set length of hose. Hose should not be straight, but not too bent – otherwise, pellets would accumulate and stuck in it. Connect feeder into socket on the rear boiler side.

BURNER START

Burner is automatically turned into standby mode by switching the main boiler switch.

Burner is started by turning the burner mode switch on and by turning the boiler thermostat into position adequate to the required boiler temperature. According to the requirement for heat supply, the burner is started and combusts pellets, until thermostat gives instruction for stop.

Burner is alternatively controlled by boiler thermal probe, connected to the TS1 connection on the right upper side of circuit board. Make sure, that connection is tightly fixed.

BURNER SHUT DOWN

Burner is turned off by the stop signal from operating thermostat, by turning the burner switch off (standby mode) or by the *burn-down* activated through menu.

EMERGENCY SHUT DOWN



ATTENTION! In emergency case can be burner turned off by the main boiler switch and disconnection of boiler power plug from electrical socket.

CLEANING AND MAINTENANCE

Burner has to be cleaned after every consumption of 2.000 kg pellets. It is based on assumption, that boiler keeps adequate amount of ash and the quality pellets are used.

It is also recommended to sweep boiler exchanger parts at least 2x a month.

1. Clean pellet inlet into burner by bottle brush or other suitable kit
2. Scrape ignition plate a grate and clean the holes in grate
3. Open the lid of turbulators and remove remaining dust (e.g. by vacuum cleaner). Make sure, that dust is not hot and it cannot burn bag of vacuum cleaner.
4. Once in 3 months it is necessary to dismantle rotary chimney part and to remove accumulated dust.



ATTENTION! Keep ash in closed containers from inflammable material.

Maintenance once a year or in case of need (by a qualified person)

Select *Burn-down* by menu buttons and wait, until the fuel in burner burns out. Turn burner off by burner switch and by main switch as well. Disconnect boiler plug from electrical socket. Open door with burner for approximately 90°.

1. Dismantle burner covering and clean photocell by cloth and soft abrasive detergent (tooth paste). Be careful by flat cable and buttons of display!
2. Clean blades of ventilator – it is the best to blow them with compressed air.
3. Dismantle scraper and ignition plate.
4. Clean space behind ignition plate
5. Scrape ignition plate and scraper
6. Brush the grate properly and clean holes in grate
7. Assemble all the parts back
8. Clean container and pellet feeder from dust and small dirt
9. Check state of the pellet inlet hose.
10. Start pellet feeder by connecting the plug into electrical socket (230 V~) to fill it with pellets.
11. Adjust the amount of pellets to be supplied

TROUBLESHOOTING

Burner stopped.

Check alarm indicated on display.

If display is black and without text, check thermal protection of boiler. If there is no error, probably it was switched off by thermal fuse. To restart burner, disconnect it from electricity, remove the cover and press the small button between connections of thermal fuse. Thermal fuse is placed directly on the fuel inlet pipe. After restarting, Mount the cover back and enable the energy supply. Burner thermal fuse turns off by temperature of 93°C.

Displayed message	Explanation	Recorded error code
ERROR:IGNITION FAILED		10
ERROR: LOST FIRE	Extinction by heating, restart failed	11
ERROR: PHOTSENS	Faulty photocell, abnormal light	12
ERROR: PCB OVERHEATED	Too high temperature under cover	13
ERROR: TEMP SENSOR LOW	Faulty thermal probe of built-in operating thermostat	14
ERROR: TEMP SENSOR OVERHEAT	Faulty thermal probe of built-in operating thermostat	15
ERROR: OPTOCOULPER	Faulty PCB	16
ERROR: FAN ALWAYS ON	Fan works, when not necessary	18
ERROR: FAN STOP	Fan stopped, when not necessary	19
ERROR: FAN SPPED	Fan rotates too slowly	20
ERROR: IGNITION 1	First ignition trial failed	21
ERROR: STOKER	Pellet feeder is not connected to burner	22
ERROR: FINAL COMBUST FAILED	Photocell receives signal even 15 minutes after selecting „Burn down“	23
ERROR: BACKLIGHT	Photocell detects no flame, ignition failed	24
ERROR: NO CLEANING	Error in circuit board of scraper or in grate gear	25
ERROR: SLOW CLEANING	Grate moves too slowly	26

POSSIBLE CAUSES OF FAULTS

Error code	Possible cause	Opatrenia na odstránenie
10	Feeder does not supply enough pellets. Pellet container empty. Faulty ignition fuse. Faulty ignition coil. Photocell has to be cleaned.	Set pellet dosis. Refill container. Exchange fuse. (10 A). Exchange coil. (48 Ω +/- 5 %). Clean photocell.
11	Feeder does not supply enough pellets. Pellet container empty. Faulty ignition fuse. Faulty ignition coil. Photocell has to be cleaned.	Set pellet dosis. Refill container. Exchange fuse. (10 A). Exchange coil. (48 Ω +/- 5 %). Clean photocell.
12	Short circuit or other fault of photocell	Exchange photocell.
13	Too high temperature in boiler room.	Prevent from warmth leakage.
14	Faulty sensor of thermostat	Exchange sensor.
15	Faulty sensor of thermostat	Exchange sensor.
16	Faulty circuit board	Exchange circuit board.
18	Fan works, while burner is under the pause mode.	Exchange circuit board.
19	Fan does not work, when it should.	Exchange fuse of fan (800 mA); check connection; exchange fan
20	Fan runs too slowly.	Clean fan; Exchange fan
21	First ignition trial failed	Set pellet dosis
22	Pellet feeder is missing	Connect pellet feeder
23	Wrong pellet supply	Set pellet dosis
24	Wrong amount of pellets supplied. Faulty photocell	Set pellet dosis Exchange photocell.
25	Cleaning does not work	Check connection between circuit board of scraper and main circuit board.
26	Cleaning is slow	Clean the grate.

Error	Cause	Solution
Control light „network“ does not shine	No voltage in mains Fork of plug is incorrectly connected into el.socket Wrong power switch Damaged power plug	Check Check Exchange Exchange
Control light „burner switch“ does not shine	No requirement for heat supply Disconnected emergency thermostat Faulty switch	Find cause, solve and reset Exchange
Boiler does not achieve required parameters	Water shortage in system Too high output of pump Boiler output is not sufficient for the concrete system Bad quality fuel Low chimney draught Strong chimney draught Burner fault	Refill Correct overflow and switching Matter of project Combust prescribed fuel New chimney, appropriate connection Place reducing flap into smoke connection See Appendix 1 or 2 – Error detection
Door does not seal	Wrong glass cord	Exchange, tighten door hinges

ACCESSORIES

Name	Code
Pellet container, 500 l	PEL5000
Pellet feeder, 1.5 m	PED150A
Pellet feeder, 2.5 m	PED250

ADVANCED MENU

Following data/parameters are adjustable by qualified person only.

All aspects of the advanced menu are available by pressing the „S“ button. Actual setting is permanently indicated in the left bottom corner by „O:“ (time/value), while new value is given in the right bottom corner by „N:“ (time/value).

To increase and decrease time or values, press buttons „+“ and „-“. To confirm and save new values, press „S“. To exit without saving, press „ESC“.

To enter into advanced menu, add 5 to the displayed random number. Example: there can be „18“ by both – „O:“ and „N:“. Now, press „+“, unless „N:18“ changes to „N:23“ and press „S“. Thereby it is enabled to enter into the advanced menu.

Example:

MENU/ADVANCED	
O: 18	N: 23

Old New

Output setting:

EFFECT ADJ.	
ENTER	> EXIT

Here you can select three outputs as FINAL OUTPUTS in generally accessible menu (8 – 30 kW).

When you press „S“ by „EFFECT ADJ.“ message, in the left upper corner appears „EFFECT 1 (kW)“ and in the left bottom corner appears „O:14“ (i.e. actual value of the final output in kW).

Then, the second output level is displayed („EFFECT 2“) to be set to the required value. If you do not wish to change it, press „S“ to save the displayed value (e.g. „N:22“ – EFFECT 2 – thereby, the second output level will be 22 kW).

At the end is third output level displayed („EFFECT 3“) to be set for required value. If you do not want to change it press again „S“ button to save displayed value (e.g. „N:30“ - the third output will be set for 30 kW).

To let display without saving changes, press „ESC“.

Ignition setting:

IGNITION	
ENTER	< > EXIT

Here you can adjust ignition fuel feed in %. This value had been automatically calculated adequately to the weight entered by the feeder setting – amount.

After pressing „S“, the „Ignition dosis 1“ is displayed in the left upper corner. Changes are made in %, first dosis had been pre-set to 170 g. If you increase this amount to 110 %, the first dosis will be changed to 187 g.

If the first trial of burner ignition fails, the „Ignition dosis 2“ is activated. It is set by production to 45% from 170 g, i.e. 76,5 g.

Setting of test-blow time

TESTBLOW TIME			
ENTER	<	>	EXIT

Testblow time represents period of ventilation of boiler and chimney, before the combustion starts (10–100 seconds).

By boilers with difficulty to achieve own draught it is suitable to increase the testblow time. Production setting is 15 sec.

Setting of transition phase:

TRANS.PHASE			
ENTER	<	>	EXIT

Here you can set the period from the first flame detection until the full pellet dosis is supplied according to the final output.

There are two parameters of transition: the first is 14 kW and the second is 30 kW. Time set by the first parameter defines, how long it will take to achieve 14 kW (since the flame is detected) and time set by the second parameter defines, how long it will take to achieve 30 kW (since the flame is detected). Lower required output needs shorter time to be achieved.

Setting of supply during transition phase:

TRANS.FEED			
ENTER	<	>	EXIT

Here you can set fuel supply during transition period since flame detection, until the 14 kW output is achieved.

Set the required fuel dosis to be supplied into burner after flame detection. Setting from production is 15% of full dosis for 14 kW.

Setting of cleanblow time:

CLEANBLOW TIME			
ENTER	<	>	EXIT

Cleanblow is activated, when thermostat turns off and the value detected by photocell decreases under 12 %.

Setting of ash removing:

ASH AUGER			
ENTER	<	>	EXIT

Ash removing starts automatically in the intervals set from 1 to 200 hours for the pre-set operation period.

Setting of max. combustion time:

MAX. COMB. TIME			
ENTER	<	>	EXIT

By this parameter you can set max. period of permanent burner operation.

Setting of min. pause between burn-down and ignition:

ANTI-CYCLING			
ENTER	<	>	EXIT

This parameter ensures, that the burner will not be started immediately after burner-out, but after the adjusted period.

Modulation:

MODULATION.			
ENTER	<	>	EXIT

By adjusted temperature difference ΔT , boiler output automatically decreases under the set level before the required boiler temperature is achieved.

Setting the photocell sensitivity:

PHOTOSENSOR			
ENTER	<	>	EXIT

Here you can set photocell sensitivity, i.e. value of light (in %) that will control system consider as a flame.

It should not be necessary to adjust sensitivity for light, if the photocell is installed correctly. Production setting is 50 %.

Selection of thermostat:

THERMOSTAT			
ENTER	<	>	EXIT

Here you select the required thermostat: external boiler thermostat or burner thermal probe or combination with room thermostat.

If you use burner thermal probe, you can set 2 parameters. Select the *start temperature* as first and save the value by pressing „S“ button. Then you can change *stop temperature* and save it by „S“. Burner will operate in the range of the actually adjusted temperatures. Difference between start and stop temperature should be at least 5°C.

Grate cleaning:

SCRAPPER			
ENTER	<	>	EXIT

This parameter determines, if and when will be the grate cleaning activated – before ignition or after burn-down.

Pump control:

PUMP CONTROL			
ENTER	<	>	EXIT

This parameter determines, if the circuit pump will be controlled or not. If this function is activated you have to set PUMP DELAY.

Pump security:

PUMP SAFETY TEMP			
ENTER	<	>	EXIT

After exceeding this temperature the pump always starts.

Selection of language:

LANGUAGE			
ENTER	<	>	EXIT

You can select Slovak, Czech, English, German, Italian, French, Spanish, Russian Hungarian or Swedish language.

Setting of output range:

EFFECT SPAN			
ENTER	<	>	EXIT

Burner can work with output range of 8– 14 kW, 14–22 kW or 22–30 kW, according to the range determined by this parameter.

Setting of pellet dosing:

STOKER ADJ.			
ENTER	<	>	EXIT

= The most important parameter of control system! Here you can set pellet amount supplied by feeder by full operation.

To set pellet amount you need bag and very precise scale. Firstly you work with parameter Heat value (kWh/kg). After entering this value, text „Put the bag on“ is displayed (pellet feeder should be totally filled with pellets). Put the bag on and press „S“. Watch the countdown on display, while the feeder works for 6 minutes. Then, enter weight of the fallen pellets by pressing „+“ and „-“ and confirm / save it by „S“ button.

Ventilator setting:

FANFACTOR			
ENTER	<	>	EXIT

By this parameter you can adjust flue gas by using the flue analyser for CO and CO₂ content in flue gas.

Time of feeder operation:

STOKETIME			
ENTER	<	>	EXIT

Here you can see, how long did the pellet feeder work. You can use it to calculate energy consumption, etc.

Test:

MENU/TEST			
ENTER	<	>	EXIT

Serves by troubleshooting. Here you can control components – manually or automatically.

This function is very useful by solving problems with particular components. In manual mode you can test each component individually, by pressing „S“ for start and „ESC“ for stop. To move forward / backwards, press „+/-“.

Components are displayed in the following order:

Ventilator (rotations should be stable at 2.000 during the ventilator testing);

Pellet feeder (start / stop by using „S“ / „ESC“ buttons)

Grate (moves out by pressing „S“ and moves back by pressing „ESC“. Here you can see, how many mA are consumed by unit for shifting. It should not exceed 1 800 mA – this is limit for the „Grate blockage“ message).

Other displayed options: Actual value, if thermal probe is connected; actual photocell value; indicates light (On / Off); application close.

Settings:

MENU/SETUP			
ENTER	<	>	EXIT

Here you can set settings saved by installation. Production and installation settings can be reset here as well.

Three main options are available: Boot settings, Save settings and Production settings.

- “Boot settings” – here you can set original settings.
- “Save settings” – definitive adjustment of burner settings, made by installer. This enables easier browsing of settings for the case of too many parameter changes.
- “Production settings” – original settings are saved here to be rebooted, when necessary .

Record:

MENU/LOG			
ENTER	>	EXIT	

All errors are saved and displayed here together with their frequency. Total number of ignition trials is saved here as well.

Four options are accessible: number of errors, number of first ignitions, number of second ignitions, the newest errors.

- “Number of errors” – indicates every error code separately, e.g. E-CODE 10 (X). See page 30 to see the codes and explanation.
- “Number of first ignitions” – indicates, how many times there was an ignition.
- “Number of second ignitions” – indicates, how many second ignition trials were made by burner (i.e. how many times did the first trial fail).
- “Last errors” – indicates error codes ordered by their frequency. It enables easier troubleshooting.

INSTRUCTIONS TO DISPOSAL OF PRODUCT AFTER EXPIRATION OF ITS LIFETIME

Disposal of product (boiler) has to be ensured by a scrapyard, eventually by a disposal site controlled by appropriate municipal authority.

DISPOSAL OF PACKAGING

Disposal of packaging has to be ensured by a scrapyard, eventually by a disposal site controlled by appropriate municipal authority.

ACCESSORIES

The ATTACK PELLET 30 AUTOMATIC Plus boiler is delivered functionally tested. It is packed and placed on wooden pallet. Pellet feeder is packed separately.

Delivery includes the following accessories:

- Manual for attendance
- Guarantee letter

Recommended fuel feeder is the standard ATTACK feeder of 1,5 m length.

Information about processing of personal data

Dear Customer,

You provide us your personal information by completing and sending the Boiler start-up record and our company becomes your personal data manager in relation to you.

We hereby would like to inform you why and how we process your personal information, how we collect your personal information, for what purpose we handle it and the legal basis of such processing, how we handle personal data and what your rights are in relation to processing your personal data.

Please read the following information carefully before providing us your personal details.

In case of any questions related to the processing of your personal data, please do not hesitate to contact us at tel. no. 00421 43 400 3131 or support@attack.sk.

Privacy Manager:

ATTACK, s. r. o., with its registered office at Dielenská Kružná 5020, 038 61 Vrútky, Slovak Republic

Tel.: +421 43 4003 101

Fax.: +421 43 3241 129

E-mail: export@attack.sk

Web: <http://www.attack.sk>

Processing of personal data

We will only process the personal information you provide to us in the Boiler start-up record, i.e.:

- Name
- Surname
- Address
- Phone
- Type and serial number of the product

Purpose and legal basis for the processing of your personal data

We will process your personal data for the following purposes and on the basis of the following legal bases.

- 1) For the purposes of direct marketing, which is a legitimate interest of our company. The legal basis here is Art. Article 6 1. Letter. (f) Regulation (EU) 2016/679 of the European Parliament and of the Council of 27 April 2016 on the protection of natural persons with regard to the processing of personal data and on the free movement of such data, and repealing Directive 95/46/EC (General Data Protection Regulation).

The processing based on our legitimate interest, i.e. direct marketing, is following:

Your personal data will be stored in our electronic database which is managed directly and only by us. This electronic database is stored and secured on the property of our company. Your personal data will be used by our legitimate interest only in order to be able to send you an offer of our new products, especially in the event of the end of the expected life of product which you enter your personal data in the Boiler start-up record in if our company develops a newer and more technologically superior and better product that could replace the product in which you enter your personal data into the in the Boiler start-up record.

Direct marketing is our legitimate interest and the one of two purposes of processing of your personal data, i. e. direct offer of our products sent to you.

- 2) The legal basis for fulfilling the extended warranty agreement on the product in which you enter the Boiler Startup Record where your personal data is Art. Article 6 1. Letter.

(f) Regulation (EU) 2016/679 of the European Parliament and of the Council of 27 April 2016 on the protection of natural persons with regard to the processing of personal data and on the free movement of such data, and repealing Directive 95/46/EC (General Data Protection Regulation).

This processing that is required to meet the extended warranty agreement for a product you are one of the parties will be following:

Our company provides you with an extended contractual warranty (beyond the statutory warranty) in such situation that you comply with the warranty conditions (see the warranty conditions in the Instruction for use, in which there is the Boiler start-up record with your personal data). In order to provide you with this extended contractual warranty we need to know who is the other party and whether you are performing your obligations under this agreement especially the mandatory annual service inspections. Therefore we need you to send us a record of this inspection after each annual inspection (max. 5 inspections) and we will declare in our database that you fulfill the terms of the contractual guarantee.

Since each contract has at least two contracting parties we need your personal data to identify you as a party and identify a specific product for the purposes of fulfilling the extended warranty agreement. We would not be able to fulfill our obligations under the extended warranty agreement properly without these data.

Our legitimate interest and one of the two purposes of processing your personal data is therefore the fulfillment of the contract, that is, the fulfillment of the contract for extension of the contractual guarantee.

Processing of personal data for both purposes is done manually and also in electronic information systems. However these systems are subject to rigorous and constant physical and technical control. All persons who, on the basis of our instructions and our credentials, come in contact with personal data in the framework of their work or contractual obligations are bound by confidentiality.

Category of recipients of personal data

We process your personal data primarily by ourselves. However it may happen that we will have to use the services of another entity to process personal data for any of the above mentioned purposes. In this case the relationship between us and the third party will be the relationship between the administrator and the processor and we will make an agreement with this processor about the processing of the personal data in order to guarantee the security and legality of processing your personal data.

Your personal data may therefore be sold to the recipient of the following categories:

- a) A company that distributes our products in the territory of a member state of the European Union in which you have purchased a product which you enter your personal data in the Boiler start-up record in or in which such a product is put into service on your request
- b) A company providing bulk mailing services

The length of time the personal data will be stored

We will process your personal data for at least the duration of the contractual warranty (i.e. for 5 years) for the purposes of fulfilling the warranty agreement and at most for the time of assumed lifetime of the products for which the Boiler start-up record for the purposes of direct marketing.

Raising objections to processing of personal data

Whenever you have the right to object to our processing of your data for direct marketing purposes (see Purpose and legal basis for processing your personal data, item 1) above). If you have

an objection to our processing of your direct marketing data, by the date of your objection will cease our processing your personal data for direct marketing purposes.

The objection to the processing of your personal data for direct marketing purposes can be sent to us by post to:

ATTACK, s. r. o., Dielenská Kružná 5020, 038 61 Vrútky, Slovak Republic. In the objection, it is sufficient to provide the name, address and the text "I hereby raise an objection to the processing of my personal data for the purposes of direct marketing" and your signature. We always inform you about the accepting your request without delay.

Please note that the right to object can not be invoked against our processing of your personal data necessary for the purpose of fulfilling the extended warranty agreement.

Your other rights related to the processing of personal data

Please note that you also have the following rights in relation to our processing of your personal information:

- to ask for information about what personal data is processed by us,
- to request access to these data and let them update or fix,
- to require the deletion of these personal data, or the limitation of their processing,
- to raise objection to the processing of your personal data,
- the right to the portability of your personal data,
- in case of doubt regarding compliance with the obligations related to the processing of your personal data, contact the Administrator or the Office for Personal Data Protection.

You may enforce these rights to our company by the same procedure as the right to raise objections to the processing of personal data.



Warranty Certificate

The product meets technical standards and technical conditions. The product was made according to valid drawing documentation with the required quality and approved by the State testing institute.

Guarantee

The company ATTACK, s.r.o. warrants for this product only if there have been met conditions of the warranty in time 24 months - 2 years - from the date of starting the boiler up.

The serial num. of the boiler:

Type:

Insert barcode here

Date of shipment from manufacturer:

The warranty conditions:

The warranty covers all faults of the device and its components that have resulted from faulty material or mistakes made by processing of the material.

The warranty does not apply to gaskets, sealing cords, insulating materials, fireclay fillings, ignition spirals.

The warranty for the device is subject to the following conditions:

- a warranty card fully completed will be submitted to the complaint
- the installation of the equipment was carried out by a qualified employee of a professional installation company
- assembly and commissioning were confirmed in the warranty card
- the device will be used exactly according to the manufacturer's instructions and recommendations which are listed in the installation manual
- if the system has been cleaned before installing and starting the system, the treated heating water and the mounted filter

In the absence of any defect or fault caused by unprofessional operation by the customer, the costs associated with the work of the serviceman/technician are covered by the person who required for the repair.

The warranty claim expires and does not cover faults and damages that have arisen from:

- damage during transport
- breaking the rules about the installation, operating and maintenance instructions from the instructions of use
- violent mechanical damage
- unprofessional repairs or modifications, unprofessional operation and transportation
- if the warranty card is not completed properly
- a natural calamity
- arbitrary customer's conversion of device
- by making a design change or by modifying the text of the warranty certificate
- do not carry out a mandatory service visit within a given time
- install the device in a dirty and aggressive environment
- by clogging or clogging the boiler body with dirt from the system and water

The boiler is not subject of the warranty if:

- it is not operated with the prescribed fuel:
- for gasification boilers - wood with a humidity content not exceeding 20%, or with a fuel not specified by the manufacturer
- for pellet boilers - wood pellets of 6 mm diameter, max. length 35 mm, according to DIN 51 731-HP 5 or DIN Plus or EN 14961-2-A1
- Regumat ATTACK-OVENTROP will not be installed in the system to ensure that the boiler return temperature is at least 65 °C during operation
- there is no functional thermostatic valve installed to the boiler for cooling circuit connected to the cooling water source
- it is not connected to the chimney with the prescribed dimensions specified in the operating instructions

Instructions for complaint:

To make a warranty service, please contact the appropriate serviceman/technician with the following information:

- the exact address and contact of the user where the device is installed
- the approximate nature of the fault
- when and by whom device has been installed and put into operation
- device type, serial number and date of manufacture

After completing there will be made a record of reparation and the user will confirm the work.

The serviceman/technician is obligated to keep the user proof of repair. If the Service Officer detects any device interference or other damage and does not carry out the required service inspection, he is required to notify the user that the repair will be carried at his own expense and at the same time loses his / her entitlement to the next warranty.



ATTACK, s.r.o. • Dielenská Kružná 5020, 038 61 Vrútky • Slovakia
Tel: +421 43 4003 101 • Fax: +421 43 3241 129 • E-mail: kotle@attack.sk
Export – tel: +421 43 4003 103 • Fax: +421 43 3241 129 • E-mail: export@attack.sk



ATTACK, s.r.o. producer reserves the right to change technical parameters and dimensions of boilers without previous warning.